5

NOW LET'S GET STARTED

Refer to the Operation Manual for:

Channel selection ..... P. 10
Picture adjustments..... P. 11
Audio adjustments..... P. 15
Timer settings (ON/OFF Timer)..... P. 19
Child lock..... P. 21
Menu structures..... P. 23
Teletext mode..... P. 24

TROUBLESHOOTING

PROBLEM	CHECK ITEM	PAGE
No picture or sound	- TV not plugged in Outlet power OFF	4
	- Main Power button of TV not ON	7
	- Aerial not connected to terminal at the back of the TV set	4
	- Check STEREO Menu: Speakers matrix and Identification.	18
Sound OK, picture poor	- Aerial not connected to terminal at the back of the TV set	4
	- Adjust COLOUR control	11
	- Check if the Brightness or Contrast setting in the picture setting mode might be all the way to the minus side	11
Picture OK, sound poor	- Increase the volume	15
	- Check AUDIO MODE and Audio levels Menus	16,17
	- Poor equalizer adjustment. Check Graphic Equalizer	18
	- Check STEREO Menu: Speakers matrix and Identification.	18
Picture weak / No colour	- Aerial not connected to terminal at the back of the TV set	4
	- Adjust COLOUR control	11
	- Try fine tuning to correct	30
Poor reception on some channels	- Aerial not connected to terminal at the back of the TV set	4
	- Check for local interference	
Remote control does not work	- TV not plugged in Outlet power OFF	4
	- Main Power button of TV not ON	7
	- Turn OFF using the Main Power button, then turn ON again after a minute	7
	- Check batteries in the Remote Control	3

Web-site:www.sharp.co.uk/support **Help Line(office hours only): 08705 274277**

SAFETY WARNINGS

1 Select a well-ventilated location.

2 Avoid exposing this set to direct sunlight, dust, heat sources or moisture.

3 Do not place objects containing liquids or candles on top of theTV.

4 Never open the back cover.

5 Never insert objects into the TV.

6 Take care not to damage the power cord.

7 Keep the TV from strongly magnetic objects.

8 To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

SHARP®

SHARP ELECTRONICA ESPAÑA, S. A.

SHARP ELECTRONICS (U.K.) LTD.

Sharp House, Thorp Road, Newton Heath, Manchester M40 5BE

PRINTED IN SPAIN
TINS-6895BMN1
03/01

SHARP®

66GF-63H

COLOUR TELEVISION

QUICK START GUIDE

for easy installation

- Fitting the batteries into the remote control
- Connecting the aerial cable
- Tuning the TV channels

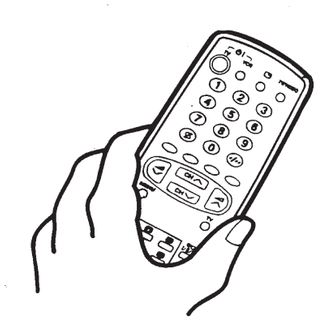

Using this installation guide should enable you to set up your TV in less than 15 minutes - - - - - - Please refer to your operation manual for more tips and advice

PRINTED ON RECYCLED PAPER

If problems persist contact the SHARP Helpline (office hours only) on tel:**08705 274277 (or (01) 676 0648** if telephoning from Ireland) and/or WEB-SITE:**www.sharp.co.uk/support**

1 SUPPLIED ACCESSORIES

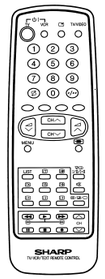

Remote control

Operation Manual

Type-AA Dry Batteries

■ Fitting the batteries

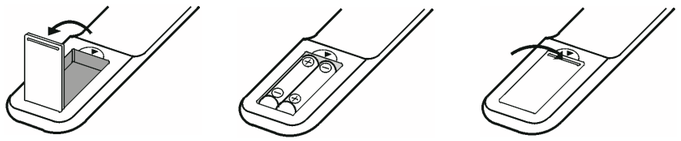

1. With your thumb nail, pull up the slit as shown.
2. Insert the two batteries as shown.
3. Replace the cover.

2 TYPICAL CONNECTIONS

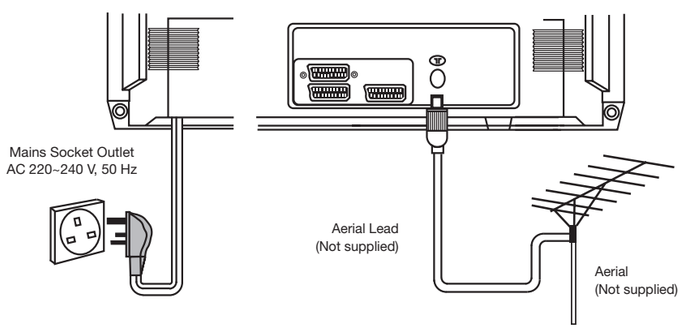

2 TYPICAL CONNECTIONS (continued)

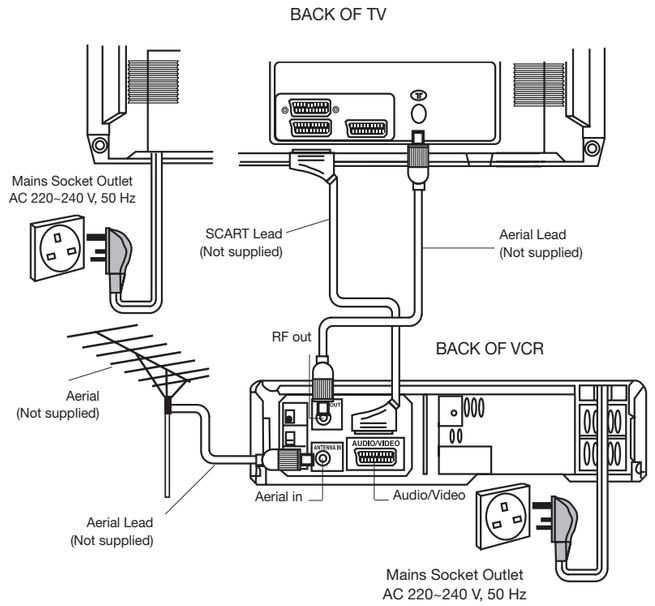

A scart lead (not supplied) is recommended for use with this TV, to obtain the best communication between your TV and VCR, please refer to page-36 of the operation manual.

Check List:

- Is the TV connected to the mains?
- Is the aerial connected to the TV?

Note: for Satellite/Cable or digital decoder page 36 of operation manual.

3 TURN TV ON FOR THE FIRST TIME

TV set

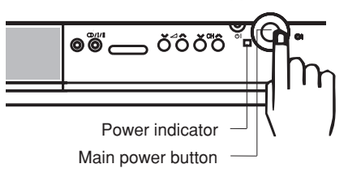

1 Press the main power button (⏻) to start the AUTO INSTALLATION.

2 The orange power indicator will light.

3 The AUTO INSTALLATION message will appear on your TV screen, and after a time will change for another with electrical connetions

Note:
If you need to repeat the “AUTO INSTALLATION”, please refer to the relevant section on page 28 of the operation manual.

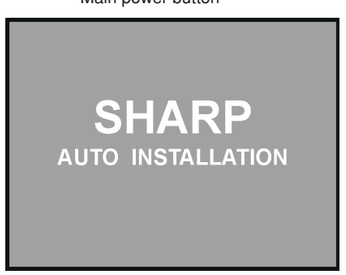

4 AUTO INSTALLATION

The AUTO INSTALLATION function will tune all available TV stations into your TV.
The TV is ready to preset automatically all local channels for you.

If you do not intend to use your TV with a VCR then please proceed to stage **4.2**

VCR

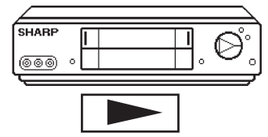

1 If the TV is being used with a VCR, turn on the VCR and play back a pre-recorded tape.

2 Now, press any button on the TV remote control and follow the instructions on the screen, to start Auto Channel Preset.

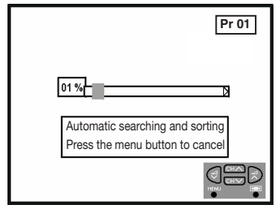

This tuning process may take several minutes to perform.

3 After searching has finished the channels will be stored in the following order:
Pr01 - BBC1,
Pr02 - BBC2,
Pr03 - ITV,
Pr04 - CH4...

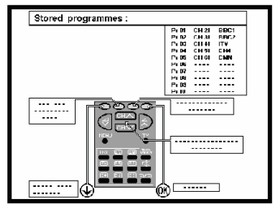

The "Stored programmes" menu will appear on screen and you can change the order of the channels and change or give the channels a four letter name.

If you wish to rename the channels, or change the order, refer to the pages 8 and 9, chapter **Stored programmes** in the Operation Manual

If you wish exit from the menu, press the BLUE button.

NOTE: IF THE TV CANNOT BE INSTALLED BY THIS METHOD, PLEASE PHONE THE FOLLOWING NUMBER: 08705 274277